

MICROPUMP®

EAGLEDRIVE™

INSTALLATION, OPERATION AND WARRANTY INFORMATION

EagleDrive™ DEMSE



DEMSN



Without Enclosure

EagleDrive™ DEELE



DEELN



Without Enclosure

PUBLISHED BY

MICROPUMP INC.

A Unit of IDEX Corporation

February 2023 © Micropump Inc.

All rights reserved.

This manual contains proprietary information which is protected by copyright. No part of this publication may be reproduced, transcribed, stored in a retrieval system, translated into any language (including computer language), or transmitted in any form without the written consent of the publisher. For further information contact your local Micropump distributor. Every effort has been made to ensure that the information contained in this manual is accurate prior to printing. However, the products described in this manual are subject to continuous development and improvement and Micropump shall not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

This document embodies proprietary information owned by Micropump, Inc. and is submitted under a confidential relationship. Except for uses expressly granted in writing, all rights are reserved by Micropump, Inc. A Unit of IDEX Corporation.

EC DECLARATION OF INCORPORATION



Herewith we declare that the products described in this Installation, Operation, and Warranty Handbook comply with the following provisions applying to them:

Drives, series EMSN and EELN

Machinery Directive 2006/42/EC
EMC Directive 2004/108/EC Class A
Low Voltage Directive 2006/95/EC

Applied harmonized standards, in particular:

AS/NZS 61000-6-4:2012 Class A
EN 809:1998/A1:2009
EN 61000-6-4:2007+a1:2001 Class A
FCC 15.107:2017 Class A
FCC 15.109(g): 2017 Class A
ICES-003:2016 Class A

Technical documentation prepared by:

Jordan Breazile
Mechanical Engineer
Micropump, Inc
Vancouver, WA 98684

Jordan Breazile

Technical File Compiler:

Fabian Stiegler
IDEX Europe GmbH
Weinstrasse 39
91058 Erlangen
Germany

Manufacturer:

Micropump Vancouver
1402 NE 136th Avenue
Vancouver, WA 98684

Jordan Breazile

(Signature of Manufacturer)

Importer in country of use:

(Signature of Importer)

The machinery described in this certificate must not be put into service until the machinery in which it is incorporated has been declared in conformity with the provisions of the Machinery Directive and their amendments.

UKCA DECLARATION OF INCORPORATION



Herewith we declare that the products described in this Installation, Operation, and Warranty Handbook comply with the following provisions applying to them:

Drives, series EMSN and EELN

Machinery Directive 2006/42/EC
EMC Directive 2004/108/EC Class A
Low Voltage Directive 2006/95/EC

Applied harmonized standards, in particular:

AS/NZS 61000-6-4:2012 Class A
EN 809:1998/A1:2009
EN 61000-6-4:2007+a1:2001 Class A
FCC 15.107:2017 Class A
FCC 15.109(g): 2017 Class A
ICES-003:2016 Class A


Technical documentation prepared by:

Jordan Breazile
Mechanical Engineer
Micropump, Inc
Vancouver, WA 98684



manufacturer:

Micropump Vancouver
1402 NE 136th Avenue
Vancouver, WA 98684



(Signature of Manufacturer)

Technical File Contact:

Gast Group Ltd
Unit 11, the IO Centre Nash Road
Redditch, B98 7AS
United Kingdom



Importer in country of use:

The machinery described in this certificate must not be put into service until the machinery in which it is incorporated has been declared in conformity with the provisions of the Machinery Directive and their amendments.

STANDARD LIMITED WARRANTY

The products manufactured by Micropump Incorporated are warranted to be free from defects in workmanship and material at the time of shipment from the place of manufacture. Micropump will repair or replace, at its option, any part or component which fails to conform to this warranty for a period of one year. Micropump's obligation under this warranty is limited to the repairs or replacement of defective equipment returned to Micropump on an F.O.B. destination and freight-prepaid basis. All normal wear and tear is excepted, and product is subject to examination at Micropump to verify that the parts or components were defective at the time of sale.

For the purposes of the limited warranties, the "Stator/Controller Assembly" means only the stator and the printed circuit board and electronic components contained in the controller housing, plus the connecting control and power cables. The "Power Supply Assembly" means only the printed circuit board and the electronic or mechanical components located inside or on the power supply enclosure and the "Pump head Assembly" means all other parts of the product, including but not limited to, the rotor.

No warranty of any kind is made or shall be imposed with respect to any pump or parts (1) that have not been properly installed and tested in operation, (2) that have been subject to misuse, negligence, acts of God or the elements, or any other form of casualty, or (3) that have been repaired or altered outside Micropump's facility in a way, so as, in our judgment, to affect performance or reliability.

The parties agree that the buyer's sole and exclusive remedy against Micropump shall be for repair or replacement of defective parts under the conditions stated above. The buyer agrees that no other remedy (including but not limited to incidental or consequential damages for lost profits, lost sales, loss of use, injury to person or property, or any other incidental or consequential loss) shall be available to them.

This warranty shall not apply to prototype pumps, experimental pumps, or brush-type electric motors. Warranty of equipment or accessories from outside sources, purchased by Micropump and incorporated into Micropump's product is subject to the manufacturer's standard warranty, unless specifically agreed otherwise between Micropump and buyer. A copy of the warranty on the aforementioned equipment is available on request.

The adjustment or replacement of defective parts made under this warranty will not extend the original warranty period.

THE WARRANTY DESCRIBED ABOVE IS THE EXCLUSIVE MICROPUMP WARRANTY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY WARRANTY PREVIOUSLY ISSUED. WE NEITHER ASSUME NOR AUTHORIZE ANY PERSON TO ASSUME FOR US ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OR USE OF OUR EQUIPMENT.

YOUR MICROPUMP PRODUCT...

represents years of fluid handling experience and we feel it is the finest product available of its type.

The product you have purchased was designed and constructed for use within designated limits and conditions. Staying within performance limits and following the guidelines given in this manual will result in excellent performance and maximum life.

Should you have a question or a problem, technical assistance is available worldwide. Micropump products are designed for easy field servicing with service kits and technical support available for all products.

The Purpose of this Guide...

is to provide information to enable suitably qualified technicians and fitters to install, operate and maintain the Micropump EagleDrive and common pump/motor combinations.

Use the Guide...

when you have purchased a motor or pump/motor combination. This guide contains specific information for installation, operation, and maintenance of the EagleDrive and references some of the most common pump/motor combinations. This guide should be read in conjunction with the instructions provided with your specific pump. General information is given on installation within a system, but reference should always be made to instructions provided with ancillary equipment when installing the unit.

ABBREVIATIONS

The following abbreviations are used in this guide:

°C	Degrees Celsius	Max	Maximum
°F	Degrees Fahrenheit	Min	Minimum
EMC	Electromagnetic Compliance	RPM	Revolutions Per Minute
DC	Direct Current	SELV	Safety Electric Low Voltage
LVD	Low Voltage Directive	V	Volt(s)
IOM	Installation, Operation and Maintenance Manual	W	Watt(s)

SAFETY

The following are used throughout this guide to indicate procedure that, if not followed correctly, may result in injury to personnel or damage to equipment.



Warnings are used to alert the reader to a procedure or practice, which if not followed correctly, could result in personal injury.



Warning - Hot Surface is used to alert the reader to a procedure or practice, which if not followed correctly, could result in personal injury due to contact with a hot surface.



Cautions are used to alert the reader to a procedure or practice, which if not followed correctly, could result in damage to the pump, motor, or ancillary equipment.



Notes are used to highlight important information that may assist the reader in carrying out a procedure or in understanding the text.

TABLE OF CONTENTS

Limits of Use	8	Other EAGLEDRIVE	16
Installation in Explosive and Fire Danger Zones	9	Electrical Connections	
Description	9	Fault Output	17
Function	9	Operation	18
Unpacking and Storage	10	Magnet Decoupling	19
Assembly	10	Maintenance	19
Space Requirements	10	Troubleshooting	20
Location	11	EAGLEDRIVE Lead Wire Assignments	21
Bulkhead Mounting	11	Technical Specification	23
EMC Compatibility	11	Model DEMSE	23
Required EAGLEDRIVE Electrical Connections	12	Model DEELE	24
4-20mA Control Configuration	14	Key Electronics Components	25
Manual Control Configuration	15	EAGLEDRIVE Pump Configurations	26
		Notes	27

LIMITS OF USE

The EagleDrive motor is intended for use with pumps handling fluids in a variety of pumping systems. These fluids may be innocuous or hazardous, depending on the specific application. You should contact your local Micropump distributor or contact Micropump directly about special limitations of your pump/motor unit with regard to your specific system.

To achieve optimum performance and safe operation Micropump products must be operated with the limits given in the Technical Specification. Operation outside these limits is not recommended and may result in damage to the pump, motor, and/or ancillary equipment.



Temperature. Operating beyond the maximum operating temperature given in the Technical Specification is not recommended and may result in damage to the product and compromise safety by creating high surface temperature.



Mechanical Danger. The product must be installed in a location that exposes it to a low risk of external damage.



Hot Surfaces. Under some operating conditions, surface temperatures can exceed 90°C (195°F.) Do not touch products while operating. Do not touch within 30 minutes of system shutdown to allow surfaces to reach safe handling temperature.



Flooding and Water Immersion. The products covered by this guide are not designed to operate immersed in water. Refer to the Technical Specification for the environmental rating.



Corrosive Liquids. Corrosive liquids may eventually produce leak paths around the sealing surfaces of the product. The product should be inspected for leaks on a regular basis.



Condensation. When pumping cold liquids ensure that condensation does not present a safety hazard. Condensation on the external surfaces of the magnet cup may result in a short-circuit in the motor controller.

INSTALLATION IN EXPLOSIVE AND FIRE DANGER ZONES

Micropump offers products designed and tested for installation in explosive or fire danger zones. Contact your local Micropump distributor or contact Micropump directly to determine if your EagleDrive product combination can be certified for this use.

In addition to the warnings provided throughout this manual, the following must be considered in any explosion or fire danger zone installation:



Ensure the pump head, motor, and any mounting adapter are suitable for area classification.



Ensure that pumping liquid temperature, and motor housing temperature are maintained within acceptable range as specified by Micropump Certification of ATEX Conformity.

DESCRIPTION

The EagleDrive is a brushless DC motor with integrated controller specially designed to be electromagnetically coupled to a variety of Micropump pump heads. When properly assembled to the pump head with sealing o-ring, this comprises a sealed unit where the driven magnet is within a magnet cup that separates the pumped fluid from the atmosphere.

There are two EagleDrive models, the DEMSE and DEELE. The enclosed versions are within a thermoplastic housing. The motor is capable of rotating in both directions and has speed control input options. A tachometer signal, with a 0-5 V square-wave output provides speed feedback. The tachometer output has 2 pulses per revolution. The output frequency is multiplied by 30 to obtain RPM. The main input power is 12-36 VDC from a class 2 (SELV) source.

Both EagleDrive models can be controlled using one of these options:

1. Externally applied 0-5 VDC supply
2. Externally applied PWM (Pulse Width Modulation) signal
3. Externally applied 4-20 mA signal (conditioned with external resistor)
4. Manually-adjusted speed control (through use of external potentiometer)

FUNCTION

The driven magnet is connected to the pumping parts and is sealed in the magnet cup. This magnet forms the rotor of the brushless DC motor and is driven by the rotating magnetic field in the stator. Rotation of the pumping elements produces flow.

The control signal (supplied internally or externally) controls pump speed. Internal feedback monitors the rotational speed of the pump and regulates the speed in relation to the control voltage. The controller increases current to regulate speed against increasing back pressure (within the operating limits of the pump and motor).

UNPACKING AND STORAGE



Inspect the magnet cup before assembly with the motor. Replace or repair if there are signs of damage.

Before installing the product ensure all transit packaging has been removed.

Remove the blanks from any inlet and outlet ports. If the pump is to be stored prior to installation, re-pack the pump in its original packing, refit the blanks to the ports and store in a dry, covered environment.

Protect the pump head from damage during unpacking and installation. Impacts to the magnet cup can cause internal damage or result in rub between the magnet cup and driven magnet upon assembly with the motor.

ASSEMBLY




Loose bolts may result in pump/motor misalignment. Tighten bolts appropriately. Pump/motor misalignment may result in weakening the sealing of the enclosure. Drive housing seal described below is required for IP55 rating.

If the pump head housing assembly and EagleDrive motor are supplied separately they will need to be assembled prior to the installation.

Pump head should have a gasket attached to the mounting plate. If not, attach p/n L28880-Gasket (1) to the drive side of the mounting plate. Carefully place the gasket as concentric to the mounting plate as possible. After gasket (1) is adhered to mounting plate (2), apply a light coating of silicone grease to the gasket. Align the pump assembly flange (2) so that it matches with the cam locks in EagleDrive housing (3), then rotate clockwise to lock and align with mounting screw holes. Secure using the two screws (4) supplied with the EagleDrive. Torque screws to 0.8 N-m (7 in-lbs).

SPACE REQUIREMENTS

Refer to the Technical Specification for overall dimensions and weights of the EagleDrive and some of the most common pump/motor combinations.

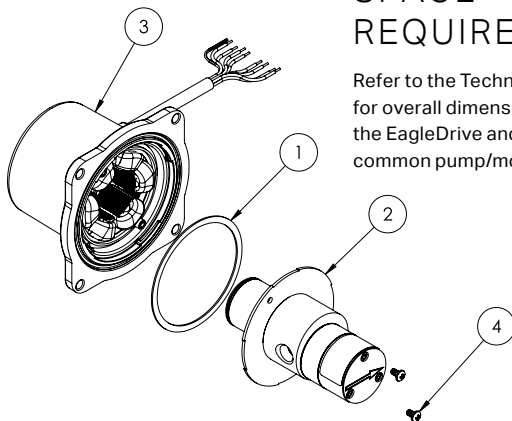

LOCATION



Pump head cannot support the weight of the motor. Ensure the motor is adequately supported by the foundation and/or mounting bracket.



The foundation must be capable of supporting the combined weight of the pump and motor and provide a rigid support.


The product should be located with the inlet below or even with the liquid level of the fluid supply. The product can be mounted in any position. Ensure that there is adequate space for operation, inspection and maintenance.

BULKHEAD MOUNTING (DEELE MODEL)

If mounting the pump/EagleDrive assembly through a bulkhead, insert the bulkhead o-ring (ITEM 1) into the groove in the face of the housing (ITEM 3). Position the adaptor flange (ITEM 2) through the bulkhead hole so that it does not interfere with the sealing of the bulkhead hole. Secure the pump/EagleDrive assembly using four screws, nuts, and washers as needed. Tighten screws evenly and in an alternating pattern.



ITEM 1: o-ring 2-040 described below is necessary to ensure bulkhead is sealed.

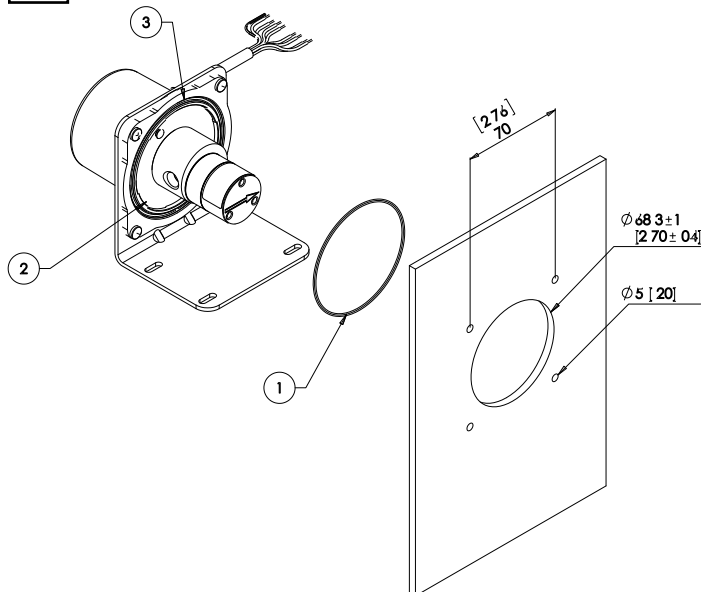

REQUIRED EAGLEDRIVE ELECTRICAL CONNECTIONS



Electrical installation must be carried out by qualified personnel who are conversant with local electricity installation regulations.



Before starting any electrical installation work ensure that the main electrical supply is adequately isolated.



Ensure that the pump motor is earthed. The pump may be electrically isolated from the motor depending on the mounting configuration. Some installations may need an earthing connection on the pump head.



Pumping flammable fluids without a proper earthing connection may cause spontaneous ignition.



Ensure that all electrical connections use a common earth ground to avoid hazardous ground loops.

MAIN Power In

24 +/- 12Vdc (nominal), voltage ripple must be maintained below 5% peak-to-peak, from SELV Class2 or Limited Power Source, Micropump always recommends external overcurrent protection (MODEL MS ~2A, MODEL EL ~3A), internal hardware-current-limit decreases motor speed to hold at current limit until rotation stops (stall), in locked-rotor condition maximum stall current is ~1.2A.



If locked rotor operation occurs at full load current in greater than 70°C ambient temperature conditions can result in winding temperatures greater than UL 1004 limits. To reduce risk of exceeding winding temperature limits Micropump recommends always monitoring the tachometer signal and commanding stop if the pump shows a locked rotor condition lasting more than one minute.



Ensure that the voltage of the supply is correct for the motor being connected, and that the source is SELV Class 2 or a Limited Power Source. Ensure that the power supply voltage ripple is maintained below 5% peak to peak.



Ensure that all associated equipment has a form of overcurrent protection. If a fuse is used see table below for recommendations.

EAGLEDRIVE MODEL

RECOMMENDED FUSE

DEMSE

LITTLEFUSE 0313002 HXP

DEELE

LITTLEFUSE 0313003 HXP

EAGLEDRIVE ELECTRICAL CONNECTIONS (CONTINUED)

Common Ground

Main Power IN voltage, control signal inputs, and all outputs use a common ground. It is possible that ground potential differences between the power supply, control voltage source and the other devices (if used) will be forced to the same ground reference when connected to the EagleDrive. Ensure only one earth ground is used to avoid ground loops.

Analog DC Control Signal In

-0.3 to 5.1Vdc control input, motor set to zero rpm -0.3 to +0.2V, motor set to 100% above +5.0V as read with ADC channel on microprocessor Input impedance ~6 kohm, input is not clamped and must remain below 5.1V max at all times Internal 100k pull down on input provided positive stop should lead be disconnected.

Input Voltage vs RPM is proportional within a given mains voltage (i.e. % of 5.0V = % of maximum motor speed as defined by main power in controlled by 8-bit microprocessor signal, operating open-loop-speed with motor max output current limited.


PWM (Pulse Width Modulation) Speed Control

% Positive duty cycle within 3% to 97% at 20-100Hz frequency results in motor speed proportional to the input (i.e. % of Positive Duty Cycle = % of maximum motor speed at defined main power in), motor set to zero rpm 0 to 3% and 97 to 100% controlled by 8-bit microprocessor signal, operating open-loop-speed with motor max output current limited.

Input impedance ~6 kohm, input is not clamped and must remain within -0.3 to 1.5v (Lo) and +3.5 to 5.1V (Hi) or the motor will be irreparably damaged.

To enable PWM IN the EagleDrive must read a "high" level signal (greater than 97% +Duty Cycle PWM signal) during each application of main power in (when firmware POST is occurring) to choose PWM IN mode. The EagleDrive will otherwise default to Analog DC Control Signal IN mode.

Example of Control Signals Necessary to Select PWM IN Mode:

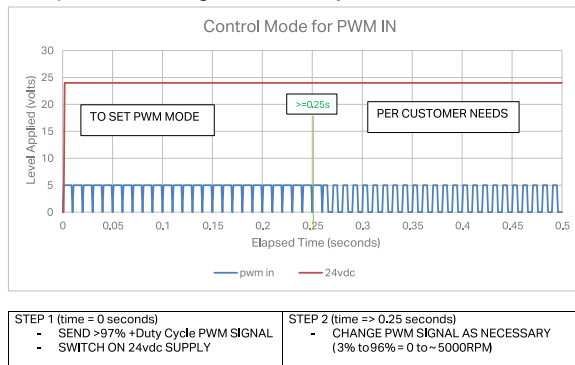


4-20mA CONTROL CONFIGURATION



To maintain protection of internal drive controller, your external resistor should be fitted with appropriate protection.

4-20mA Control

Install a 250 Ohm resistor across the white Speed Input and black Common lead wires. Applying current across this resistor will result in a commanded proportional speed from the Eagle Drive.

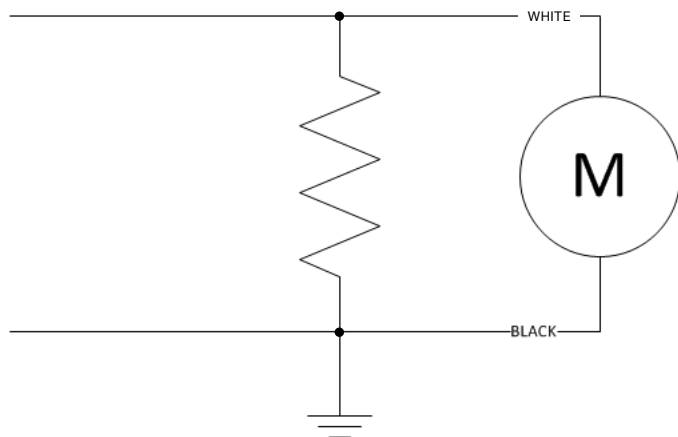

Recommended Resistor

VISHAY P/N PTF65250R00AYBF


MANUAL CONTROL CONFIGURATION



To maintain protection of internal drive controller, your external potentiometer should be fitted with appropriate protection.

Manual Control

Install potentiometer and resistor (sized according to your voltage supply input) across the red Power In and black Common lead wires. The potentiometer wiper is connected to the white Speed Input lead wire. To increase speed, rotate the potentiometer to increase voltage to the control line. To decrease speed, rotate the potentiometer to decrease voltage to the control line.

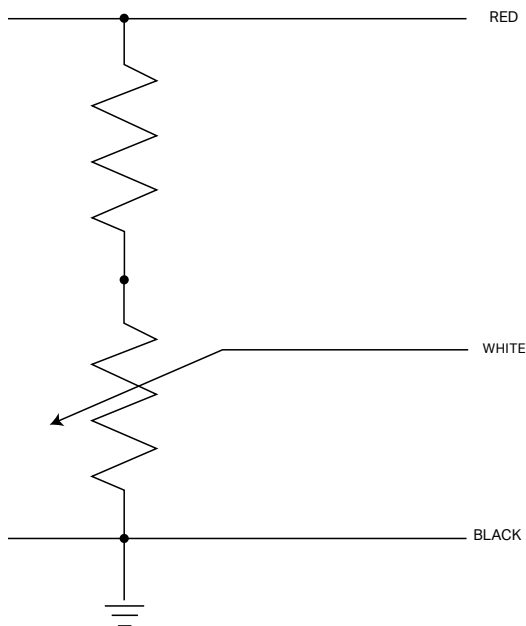

Recommended Parts (24 VDC Mains)

Resistor (38 KOHM)	VISHAY CMF5038K300FHEB
Potentiometer (10 KOHM)	VISHAY P16NP103KAB15

OTHER EAGLEDRIVE ELECTRICAL CONNECTIONS

Tachometer Output

The tachometer output can be monitored using a frequency counter. The tachometer output is 0-5V square wave pulse that occurs twice per pump drive revolution. To convert the tachometer output to rpm, multiply the output frequency (Hz) by 30.



Inadvertent connection of the tachometer output (green) wire to ground or the supply voltage can cause damage to the drive. If the tachometer is not used, trim and insulate the green lead.

Forward/Reverse Operation

The direction of fluid flow can be changed by connecting the orange wire to ground. For FORWARD flow, make NO CONNECTION to the orange wire. For REVERSE flow, connect the orange wire to GROUND.



DO NOT reverse the direction of rotation of the drive until the drive has come to a complete stop. Reversing the direction while the drive is still turning may damage the motor.



Inadvertent grounding of the forward/reverse (orange) wire will cause the drive to operate in reverse. If reverse operation is not required, trim and insulate the orange lead.



Motor/Pump performance will be different between FWD and REV operating modes.

Motor Current Output

The Motor Current Output is an analog signal (from 0 to 5vdc) that is proportional to the actual motor amps. This signal is not heavily filtered so the actual motor phase waveform will be visible in the signal. To use this most effectively first measure the signal with no speed input command to determine the offset value.

The actual signal will then be according to:

Motor Current Output = $(0.95 \times \text{Actual Amps}) + \text{Offset}$ for DEMSE products

Motor Current Output = $(0.63 \times \text{Amps}) + \text{Offset}$ for DEELE products.

FAULT OUTPUT

Active low microprocessor output, driven with 5.6kohm pull-up resistor to the internal 5V, should be monitored with a high impedance device ($R_{load} > 100\text{kohms}$)

$$V_{high} = 5 \pm 0.25\text{Vdc}$$

$$V_{low} = 0.09 \pm 0.09\text{Vdc}$$

1 kohm impedance low state, 6.6 kohm output impedance hi state

Fault signal is Vlow when:

Supply under voltage, decreasing below approximately 8 V, ~0.5V hysteresis.

Over temperature, temperature increasing above 170°C, 15°C max hysteresis.

Logic fault, error conditions on the Hall sensors (i.e. pump not installed correctly).

Internal component failure (internal short or open connection as follows).

Short from any of the motor phase connections to ground.

Short from any of the motor phase connections to the mains supply.

Short across motor phase windings.

Open condition in the internal motor phase connection.

Low load Current. This can occur at any RPM below 800 and does not indicate a drive problem.

Fault Signal	Fault Description	Drive Condition	Reason for Fault	Remedy
Lead 7 Blue				
0	Under Voltage	Disabled	Voltage supply less than 8.5V	Ensure proper supply voltage, check power and ground connections
0	Over Temperature	Operating	Internal component temperature greater than 170° C	Reduce load or increase cooling
0	Logic Fault	Disabled	Drive cannot locate the magnets inside the pump	Ensure pump is correctly attached to EagleDrive
0	Internal Short	Disabled	Drive components have failed	Reset EagleDrive by disconnecting and restoring power supply connection, if problem persists, contact Micropump for a replacement.
0	Low Load Current	Operating	Drive components have failed	Reset EagleDrive by disconnecting and restoring power supply connection, if problem persists, contact Micropump for a replacement.
1	None	Operating	No Fault	

OPERATION



Starting or running the pump with the discharge valve closed may result in overpressure in the discharge pipe.



Extended periods of dry running may result in permanent damage to the pump and may cause surface temperature to exceed the operating temperature of the pump. Ensure that the pump head temperature does not exceed the flash point temperature of the fluid or area. Shut down pump for a no fluid condition. Shut down the pump for a no flow condition.



Ensure the pump head temperature does not exceed the flash point temperature of the fluid or area.

Start-up Procedure

Before starting the pump ensure that any valves in the inlet or discharge lines are open and that any inlet filters are clean and free from obstruction.

1. Set the external control signal input to minimum value (0 VDC) or >97% PWM IN
2. Set the Main Power IN (12 VDC to 36 VDC) to ON. With the control input set to 0V or < 3% PWM IN the pump will show a nominal 25mA to 100mA current draw and will not turn.
3. Adjust the control signal input to the required level. Current demand will rise and fall as the pump load and speed varies.

Once started the pump should prime if it has not already been filled with fluid. If the pump fails to prime, stop the pump and fill the pump head with liquid.

Post Start-up Checks

Once the pump has started, carry out the following checks:

1. Check that the pump and motor operate smoothly and are free from vibration.
2. Check the inlet and discharge fittings are free from leaks.



Flow rate should always be adjusted by controlling motor speed where possible. Ensure that overpressure does not occur in the discharge pipe. NEVER throttle flow by an inlet valve.

Shut-down Procedure

Switch off the EagleDrive by:

1. Slowly decreasing the external control signal input to the minimum value.
2. Check that the unit runs down in a steady manner.
3. Switch off power supply.

Once stopped, close the inlet and discharge valves. Drain the pump if it is to be shut-down for long periods or installed in areas where the liquid may freeze. Refer to the Maintenance section for instruction on draining.

MAGNET DECOUPLING

The EagleDrive pump/motor combinations do not decouple. If pump load becomes excessive, current limiting in the controller prevents motor overload. Additional protection is provided by a thermal sensor which shuts down the drive if the internal temperature exceeds a preset value.

MAINTENANCE



Excessive wear to the pump can result in driven magnet rub on the magnet cup. This can generate high surface temperatures or degrade the capability of the pressure boundary. Remove the pump from service and replace or repair if pump performance degrades significantly or the pump becomes noisy.



Ensure that heavy deposits of dust are not allowed to accumulate. Clean the pump periodically.



The pump cannot be drained completely, a certain amount of liquid will remain in the magnet cup area. Ensure that the pump is either flushed with a suitable flushing agent or precautions are taken against the effect of any remaining liquid during servicing. When the pump has been handling flammable, toxic or hazardous fluid, the pump internals must be properly decontaminated by suitably qualified personnel. The Material Safety Data Sheet for the pumped liquid must be referred to for correct procedures and precautions to be followed when handling the liquid.

Micropump EagleDrive motors are designed to be maintenance free and require no adjustments. To ensure the motor or pump/motor assembly retains optimum performance maintain the fluid circuit to keep filters clean and prevent abrasive solids from passing through the pump.



A program that includes periodic monitoring of your Micropump product is recommended to provide timely detection and assessment of any problem.

TROUBLESHOOTING

If the EagleDrive does not meet its design performance or fails to operate correctly, refer to the following tables for assistance in identifying the cause and remedy:



Execution of troubleshooting steps, determination of root cause and corrective actions should be performed by a skilled maintenance person.

MOTOR WILL NOT OPERATE

Cause	Remedy
No power to motor.	Ensure proper voltage has been applied to motor power leads. Check leads to ensure no short circuits are present.
Control Input lead is shorted.	Clear and isolate Control Input lead from Tachometer Out lead. Clear and isolate Control Input lead from Common lead.
No Control Input applied.	Ensure proper control input is applied to control Input lead: for 0-5V, ensure line is not shorted. If manual control EagleDrive, adjust potentiometer to increase control voltage. Ensure control power supply common is connected to the common lead.
Thermal Limit is active.	Turn off motor and wait for temperature to cool. NOTE: If power voltage and control signals are present, motor will automatically restart when temperature is reached. Reduce motor load conditions and/or improve cooling of motor housing if persistent limit occurs.
Motor has been damaged.	Contact your Micropump Distributor or contact Micropump directly for replacement product.

CYCLIC NOISE OR VIBRATIONS

Cause	Remedy
Loose motor mounting bolts.	Tighten motor mounting bolts.
Foundation not rigid.	Relocate motor.
Pump loose on motor.	Tighten pump mounting bolts.
Pump is worn.	Replace or repair pump.
Tachometer Out lead is shorted to FWD/REV lead.	Clear and isolate Tachometer Out lead from FWD/REV lead.

NO TACHOMETER SIGNAL


Cause	Remedy
No power to motor.	Ensure proper voltage has been applied to motor power leads. Check leads to ensure no short circuits are present.
Improper wiring.	Check that the Tachometer Out lead is connected to the positive input of the frequency counter. Check that the common lead of the frequency counter is connected to the motor Common lead. Check leads to ensure no short circuits are present.
Motor is stopped.	Ensure proper voltage has been applied to motor power leads Ensure proper control input is applied to Control Input lead. Ensure control power supply common is connected to the Common lead.

MOTOR RUNS IN THE WRONG DIRECTION

Cause	Remedy
FWD/REV lead is shorted to Common lead.	Clear and isolate FWD/REV lead from Common lead or shield. Check leads to ensure no short circuits are present.

EAGLEDRIVE LEAD WIRE ASSIGNMENTS

Housed version PVC jacketed cable with SR-PVC insulated lead wires, 22 AWG (7/30) per UL STYLE 2517, 105°C, 300V or Micropump-approved equivalent.

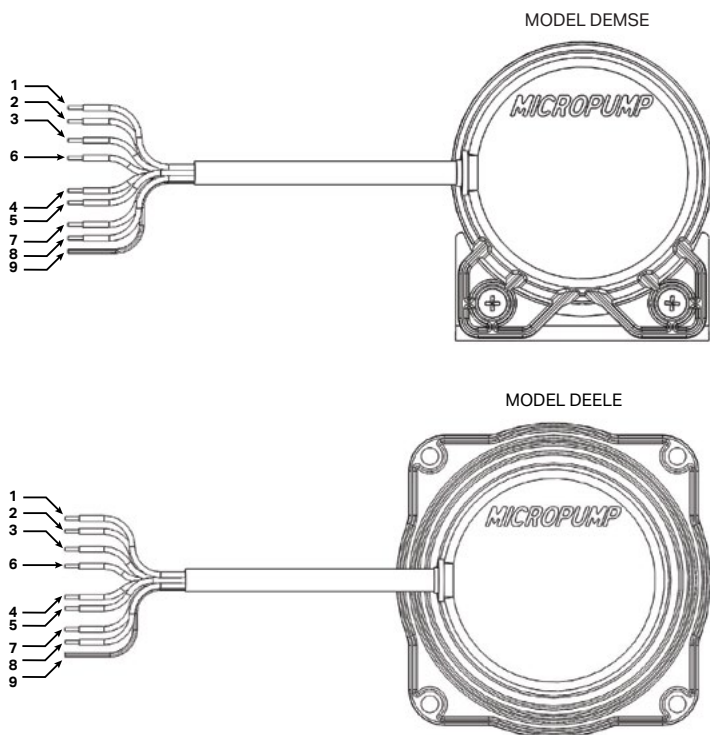


LEAD	FUNCTION	BLACK CABLE WIRES	DESCRIPTION
1	POWER	RED	+12 to +36 VDC, Class 2 (SELV), Reverse-polarity protected
2	SPEED PWM IN	YELLOW	Ground if not used
3	GROUND	BLACK	Common isolated from motor housing
4	MOTOR CURRENT OUT	BROWN	Motor Current Out
5	FWD/REV	ORANGE	Forward (float and insulate) Reverse (ground)
6	FAULT OUT	BLUE	Fault Signal
7	TACH OUT	GREEN	5 V square wave-2 pulses per revolution
8	SPEED 0-5 IN	WHITE	Control signal in, 0-5 VDC
9	SHIELD	BARE	Connected to Common

EAGLEDRIVE LEAD WIRE ASSIGNMENTS (CONTINUED)

Open-frame connector mates with:

Molex Micro Fit 3.0 per Product Specification PS-43045
Tyco Electronics Micro MATE-N-LOK per Product Specification 108-1836
Contact plating: 15µin or 30 µin gold on contact area (100 µin matte tin on solder tails)

CONNECTOR PIN NO.	FUNCTION	STD CABLE COLOR	DESCRIPTION
1	POWER	RED	+12 to +36 VDC, Class 2 (SELV), Reverse-polarity protected
2	SPEED PWM IN	YELLOW	Ground if not used
3	GROUND	BLACK	Common
4	MOTOR CUR. OUT	BROWN	Motor Current Out
5	FWD / REV	ORANGE	Forward (float and insulate) Reverse (ground)
6	FAULT OUT	BLUE	Fault Signal
7	TACH OUT	GREEN	5 V square wave-2 pulses per revolution
8	SPEED 0-5 IN	WHITE	Control signal in, 0-5 VDC

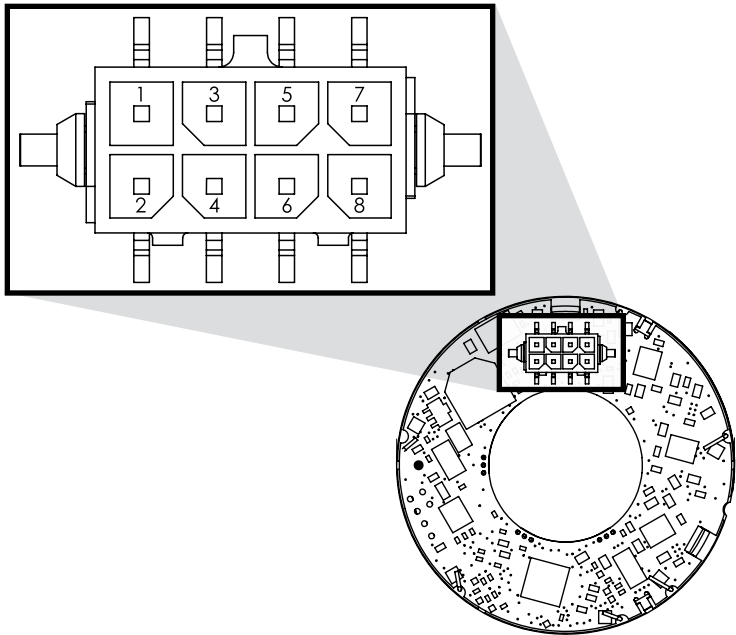


TECHNICAL SPECIFICATION




All Dimensions in mm.[inch]

MODEL DEMSE

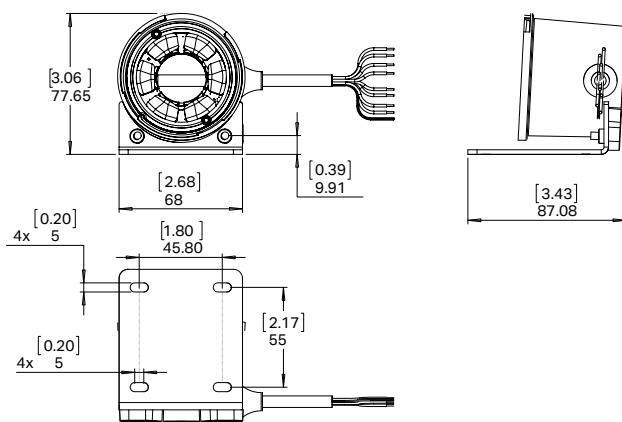

EagleDrive	
Model	DEMSE
Product Code	DEMSE
Speed Range	250 to 10000 rpm
Typical No-Load Speed (24 VDC Input / 5 VDC Control / 25°C Ambient)	6000 rpm
Speed @ Rated Torque	3500 rpm @ 70 mNm (10 oz-in)
Input Voltage Range	10 to 38 VDC
Max Full-Load Current @ Nominal Voltage (25°C Ambient)	2A @ 24 VDC
Speed Control	0 to 5 VDC
Tachometer Out	0 to 5 VDC square wave - 2 pulse per revolution
Thermal Shutdown	135°C
Thermal Restart	120°C
Storage Temperature	-40 to +135°C
Maximum Ambient Operating Temperature	85°C at max load
Reversible	Yes
Weight	0.3 kg
Power Output @ Nominal	26 W

MODEL DEELE

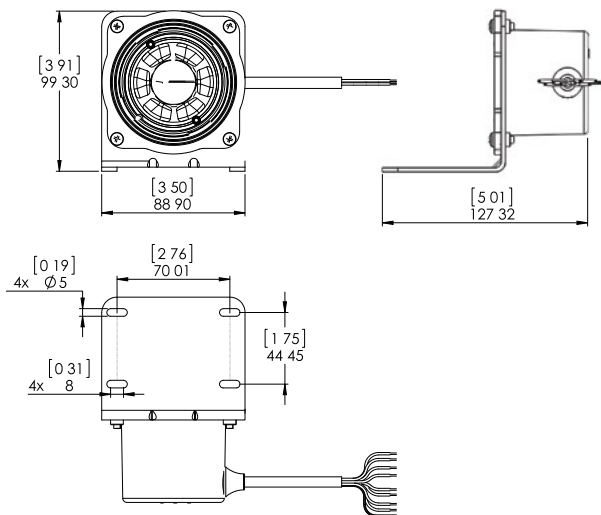

EagleDrive	
Model	DEELE
Product Code	DEELE
Speed Range	250 to 9000 rpm
Typical No-Load Speed (24 VDC Input / 5 VDC Control / 25°C Ambient)	5500 rpm
Speed @ Rated Torque	3500 rpm @ 140 mNm (20 oz-in)
Input Voltage Range	10 to 38 VDC
Max Full-Load Current @ Nominal Voltage (25°C Ambient)	2.9A @ 24 VDC
Speed Control	0 to 5 VDC
Tachometer Out	0 to 5 VDC square wave - 2 pulse per revolution
Thermal Shutdown	135°C
Thermal Restart	120°C
Storage Temperature	-40 to +135°C
Maximum Ambient Operating Temperature	85°C at max load
Reversible	Yes
Weight	0.5 kg
Power Output @ Nominal	52 W

KEY ELECTRONICS COMPONENTS

COMPONENT TYPE	MANUFACTURER	MFG P/N
SOLID TANTALUM CAP	AVX	TPSC686K016R0200
ELECTROLYTIC CAP	PANASONIC	EEHZC1H101P
ZENER DIODE	VISHAY	BZT52B3V3-E3-18
SCHOTTKY DIODE	DIODES INC	BAS70-04-7-F
ZENER DIODE	PANASONIC	DZ2J047M0L
TVS DIODE	LITTLEFUSE	SMAJ40A
BLDC CONTROLLER	ALLEGRO	A3931KJP-T
MOSFET	IRC	IRF7351PBF
HALL SENSOR	MELEXIS	US2881LUA
RECTIFIER	VISHAY	SS8P6C-M3/86A
TRANSISTOR	ZETEX	FCX1053ATA
MICROCONTROLLER	FREESCALE	MC9S08QD4MSC
OP AMP	TI	OPA322AIDBV

Equivalent alternate devices as approved by Micropump may be substituted for the specific examples above.

Remaining components are MLCC SMT capacitors and Thick-Film SMT resistors.

EAGLEDRIVE PUMP CONFIGURATIONS



Not all possible configurations are shown. Contact your local Micropump distributor or contact Micropump directly for additional versions.

EAGLEDRIVE™ DEMSE

GA Series



GJR Series



GJ Series



CA Series



GAF Series



EAGLEDRIVE™ DEELE

GB Series



GJ Series



GJR Series



NOTES

To purchase pumps, parts or receive further information contact your local Micropump distributor or contact Micropump directly.

Micropump, Inc.
A Unit of IDEX Corporation
1402 NE 136th Avenue
Vancouver, WA 98684 USA
Tel: +1 (360) 253-2008
E-mail: MPVSalesTech@idexcorp.com
Web: www.micropump.com

Your Micropump Distributor Is:

"MICROPUMP" AND THE MICROPUMP LOGO ARE TRADEMARKS OF MICROPUMP, INC.